


STANDARD KITCHEN CABINET KNOB PLACEMENT


The thread size for a standard screw on a knob is:

#8-32

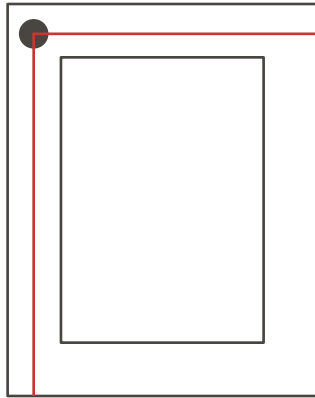


BASE KITCHEN CABINET

For standard base cabinets, place knobs 2 ½–3 inches from the upper corner opposite to the hinge.

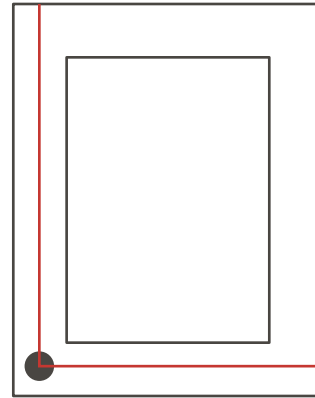


TALL KITCHEN CABINET

For standard tall cabinets, place knobs 2 ½–3 inches from the bottom corner opposite to the hinge.

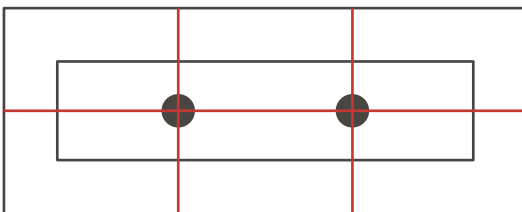

WIDE DRAWER CABINET

For wide drawers, divide the drawer into thirds, and place the knobs to the left and the right of the subsequent lines.

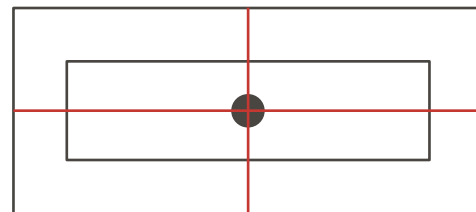

STANDARD DRAWER CABINET

For standard and small drawers, place the knob directly in the center of the drawer.