




*US Cabinet
Depot*

RTA CABINET ASSEMBLY GUIDE

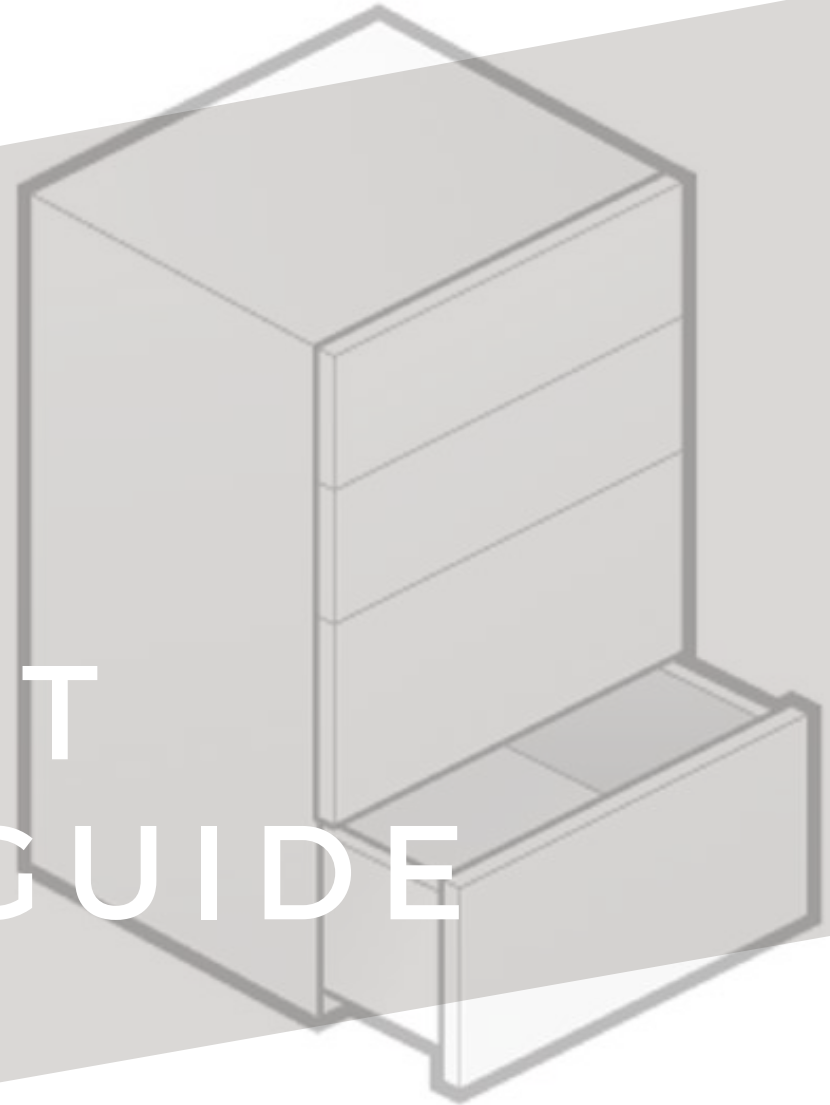

KitchenCabinetKings.com
(888) 696-6454

WBC2730,WBC2736,WBC2742

ASSEMBLY INSTRUCTIONS

GETTING STARTED:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint top panel with side panel

STEP 3: Joint bottom panel with side panel


STEP 4: Attach frame on

STEP 5: Put on the adjustable shelves


STEP 6: Fix door onto the frame and adjust the cover-space

PARTS LIST


NO.	DESCRIPTION	QTY
A	SIDE PANEL	2
B	BACK PANEL	1
C	TOP & BOTTOM PANEL	2
D	FACE FRAME	1
E	ADJUSTABLE SHELF	2
F	CABINETS DOOR	1

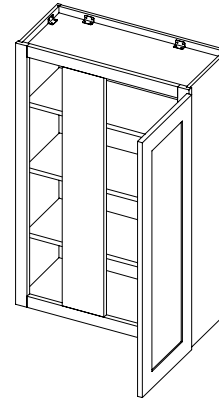


STEP: 1

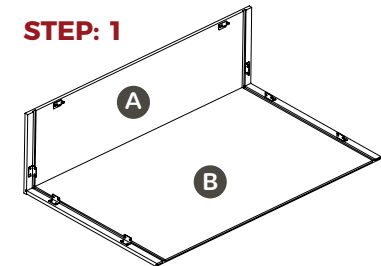


STEP: 2

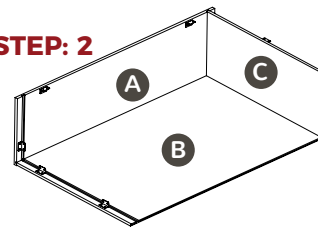


STEP: 3

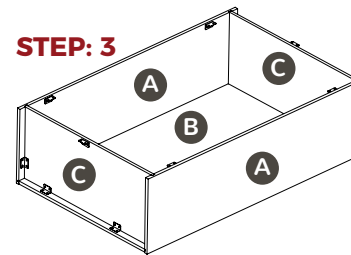


STEP: 4

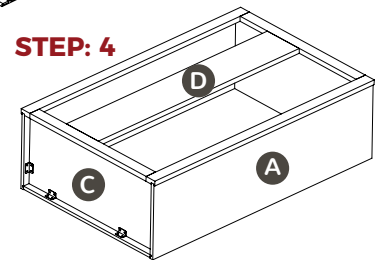

STEP: 5

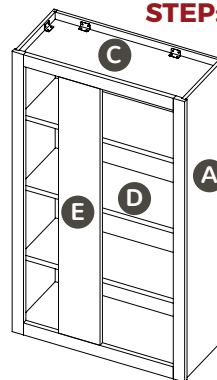

STEP: 6

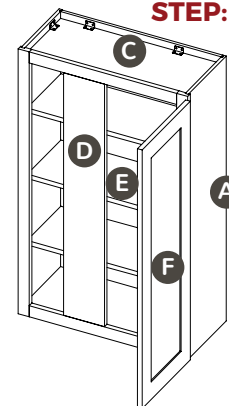

HARDWARE LIST			
NO.	DESCRIPTION	QTY	PICTURE
1	1/2" HINGE	2	
2	3/4" ROUND HEAD SCREW	2	
3	BUMPER	2	
4	SHELF CLIP	8	
5	9/16" ROUND HEAD SCREW	56	
6	CLEAT	14	
7	1" FLAT HEAD SCREW FOR CARCASS	6	

W0930,W1230,W1530,W1830,W2130 W0942,W1242,W1542,W1842,W2142 ASSEMBLY INSTRUCTIONS

GETTING STARTED:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel


STEP 2: Joint top panel with side panel

STEP 3: Joint bottom panel with side panel

STEP 4: Attach frame on

STEP 5: Put on the adjustable shelves


STEP 6: Fix door onto the frame and adjust the cover-space

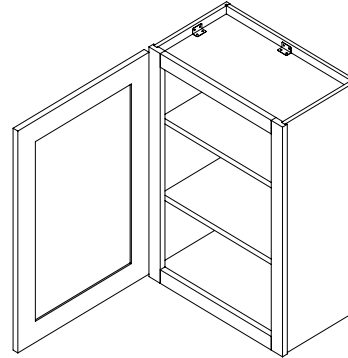


PARTS LIST

NO.	DESCRIPTION	QTY
A	SIDE PANEL	2
B	BACK PANEL	1
C	TOP & BOTTOM PANEL	2
D	FACE FRAME	1
E	ADJUSTABLE SHELF	2 OR 3
F	CABINETS DOOR	1


STEP: 1

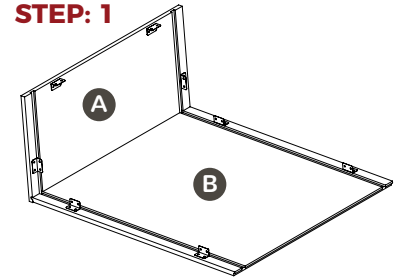


STEP: 2

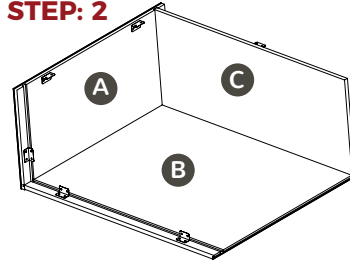


STEP: 3

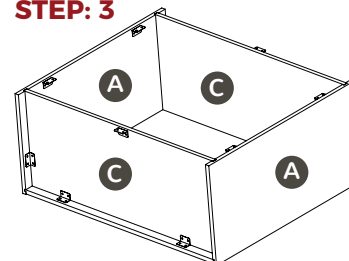


STEP: 4

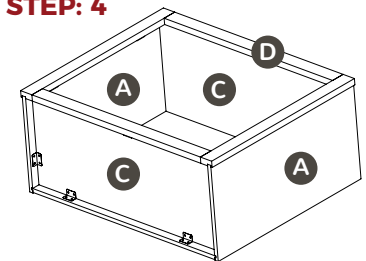

STEP: 5

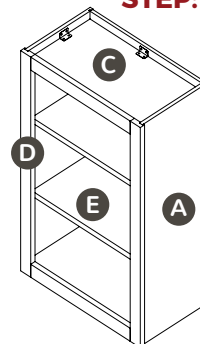

STEP: 6

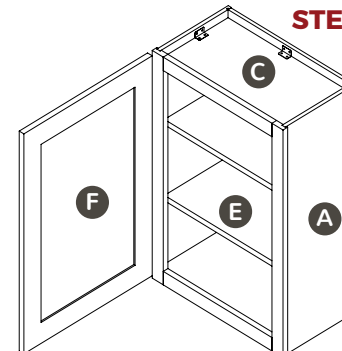

HARDWARE LIST

NO.	DESCRIPTION	QTY	PICTURE
1	1/2" HINGE	2	
2	3/4" ROUND HEAD SCREW	2	
3	BUMPER	2	
4	SHELF CLIP	8	
5	9/16" ROUND HEAD SCREW	40	
6	CLEAT	10	
7	1" FLAT HEAD SCREW FOR CARCASS	4	

DCW2430,DCW2436,DCW2442

ASSEMBLY INSTRUCTIONS

GETTING STARTED:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel


STEP 2: Joint top panel with side panel

STEP 3: Joint bottom panel with side panel

STEP 4: Attach frame on

STEP 5: Put on the adjustable shelves

STEP 6: Fix door onto the frame and adjust the cover-space

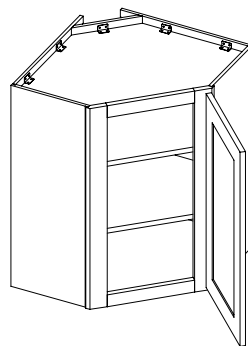


PARTS LIST

NO.	DESCRIPTION	QTY
A	FACE FRAME	1
B	SIDE PANEL	2
C	TOP & BOTTOM PANEL	2
D	BACK PANEL	2
E	BACK PANEL	1
F	ADJUSTABLE SHELF	2
G	CABINETS DOOR	1


HARDWARE LIST

NO.	DESCRIPTION	QTY	PICTURE
1	1/2" HINGE	2	
2	3/4" ROUND HEAD SCREW	2	
3	BUMPER	2	
4	SHELF CLIP	10	
5	9/16" ROUND HEAD SCREW	92	
6	CLEAT	22	
7	1" FLAT HEAD SCREW FOR CARCASS	6	
8	135 DEGREE ANGLE	2	


STEP: 1

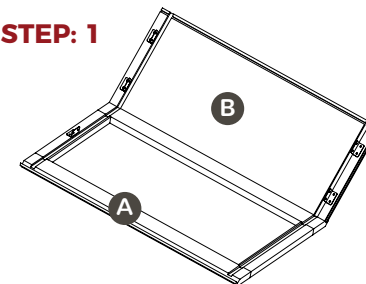


STEP: 2

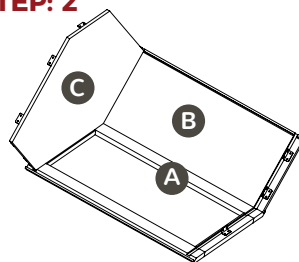


STEP: 3

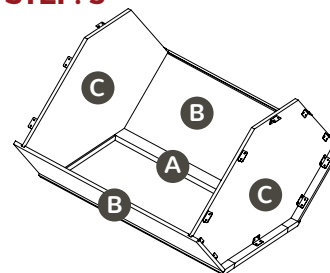


STEP: 4

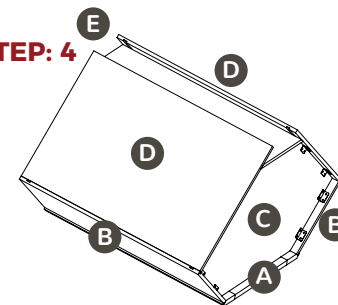

STEP: 5

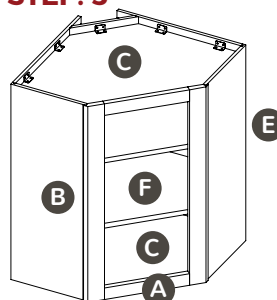

STEP: 6

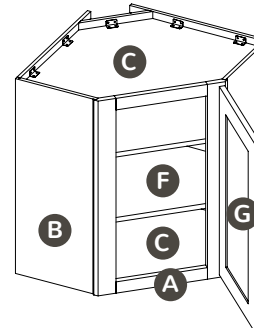

AW1230,AW1236,AW1242

ASSEMBLY INSTRUCTIONS

GETTING STARTED:

prepare a protection layer, a screwdriver


STEP 1: Joint top & bottom panel with side panel

STEP 2: Attach left side panel

STEP 3: Attach the frame

STEP 4: Hinge the door to the face frame and adjust the cover-space


STEP 5: Put on the adjustable shelves

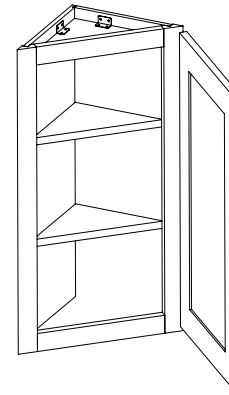


PARTS LIST

NO.	DESCRIPTION	QTY
A	RIGHT SIDE PANEL	1
B	TOP & BOTTOM PANEL	2
C	LEFT SIDE PANEL	1
D	FACE FRAME	1
E	CABINETS DOOR	1
F	ADJUSTABLE SHELF	2 OR 3


STEP: 1

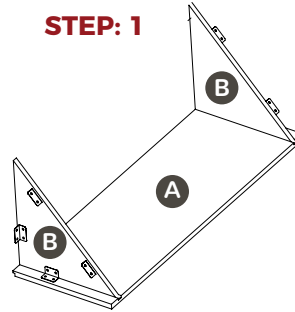


STEP: 2

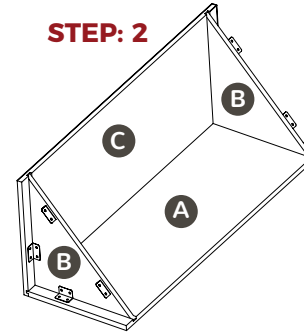


STEP: 3

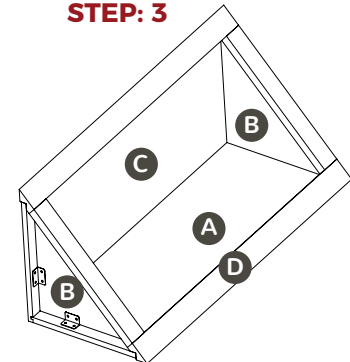

STEP: 4

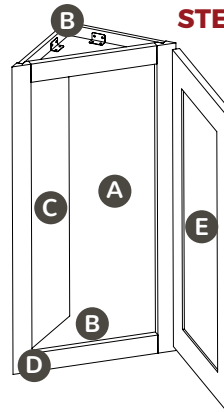

STEP: 5

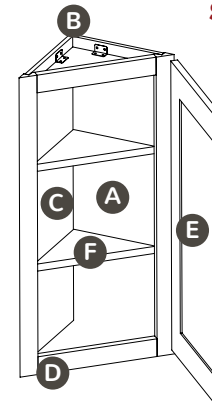

HARDWARE LIST

NO.	DESCRIPTION	QTY	PICTURE
1	1/2" HINGE	2	
2	3/4" ROUND HEAD SCREW	2	
3	BUMPER	2	
4	SHELF CLIP	8 OR 12	
5	9/16" ROUND HEAD SCREW	32	
6	CLEAT	8	

DCSF42

ASSEMBLY INSTRUCTIONS

GETTING STARTED:


prepare a protection layer, a screwdriver

STEP 1: Put the front face frame on the floor


STEP 2: Fix door&drawer head onto the frame and adjust the cover-space

PARTS LIST


NO.	DESCRIPTION	QTY
A	FACE FRAME	1
B	DRAWER HEAD	1
C	CABINETS DOOR	2

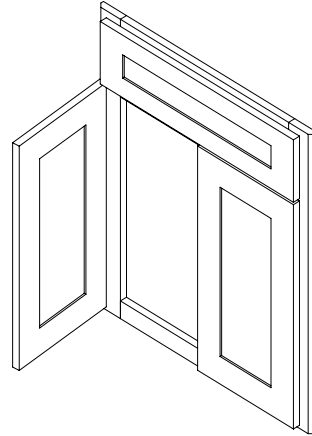

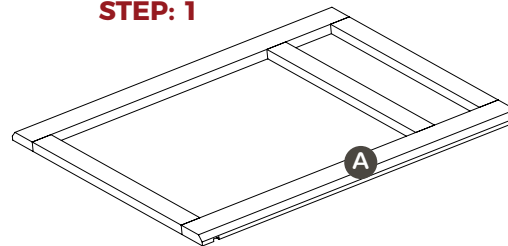


STEP: 1

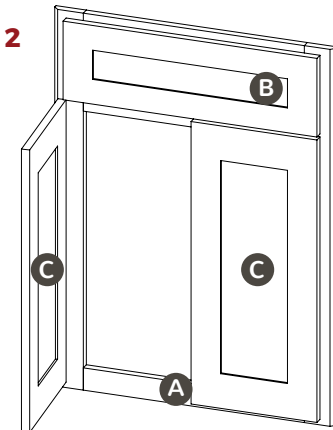

STEP: 2



HARDWARE LIST

NO.	DESCRIPTION	QTY	PICTURE
1	1/2" HINGE	4	
2	3/4" ROUND HEAD SCREW	4	
3	BUMPER	4	

PR3015

ASSEMBLY INSTRUCTIONS

GETTING STARTED:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint top panel with side panel

STEP 3: Joint bottom panel with side panel


STEP 4: Attach the dish rack on the both side

STEP 5: Attach front face frame on


PARTS LIST

NO.	DESCRIPTION	QTY
A	SIDE PANEL	2
B	BACK PANEL	1
C	TOP & BOTTOM PANEL	2
D	PLATE RACK	2
E	FACE FRAME	1


STEP: 1

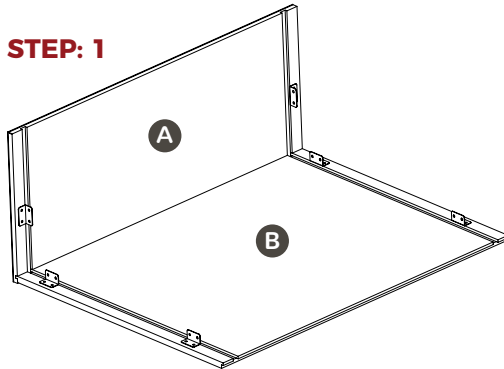


STEP: 2

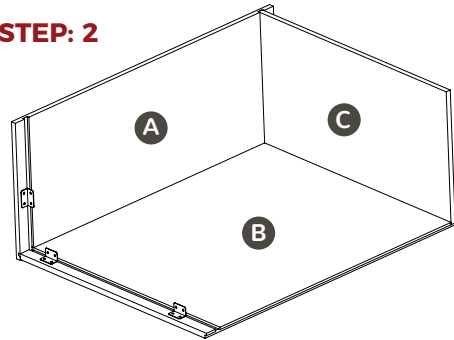


STEP: 3

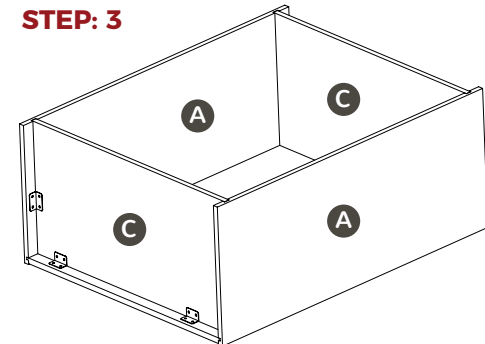




STEP: 4

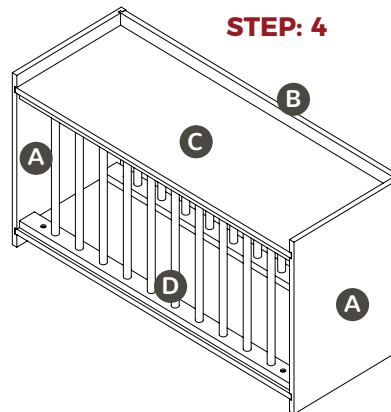

STEP: 5

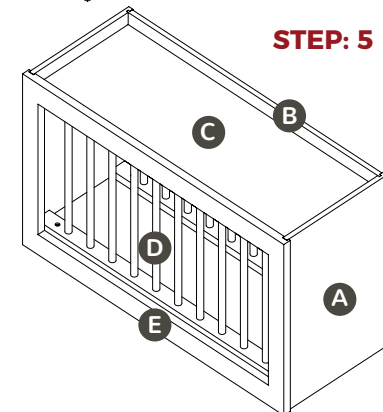

HARDWARE LIST

NO.	DESCRIPTION	QTY	PICTURE
1	9/16" ROUND HEAD SCREW	48	
2	CLEAT	12	
3	1" FLAT HEAD SCREW FOR CARCASS	16	

O338424,O339024,O339624

ASSEMBLY INSTRUCTIONS

GETTING STARTED:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with top panel

STEP 2: Joint back panel with side panel

STEP 3: Joint side panel with middle & bottom panel


STEP 4: Joint side panel with middle & bottom panel

STEP 5: Fix shelf board

STEP 6: Attach frame on and toekick board

STEP 7: Joint the drawer together, then install the drawer guide.

STEP 8: Fix door&drawer head onto the frame and adjust the cover-space

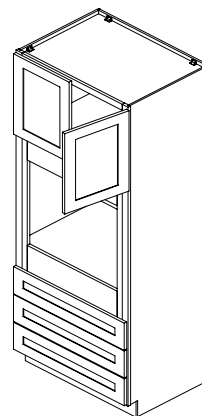


PARTS LIST

NO.	DESCRIPTION	QTY
A	SIDE PANEL	2
B	TOP & BOTTOM PANEL	3
C	BACK PANEL	1
D	FACE FRAME	1
E	TOE KICK	1
F	DRAWER BOX FRONT AND BACK	6
G	DRAWER BOX SIDE	6
H	DRAWER BOX BOTTOM	3
I	DRAWER HEAD	3
J	CABINETS DOOR	2
K	ADJUSTABLE SHELF	2


HARDWARE LIST

NO.	DESCRIPTION	QTY	PICTURE
1	1/2" HINGE	4	
2	3/4" ROUND HEAD SCREW	4	
3	BUMPER	16	
4	1" ROUND HEAD SCREW	12	
5	EPOXY SLIDE	3	
6	SHELF CLIP	4	
7	9/16" ROUND HEAD SCREW	68	
8	CLEAT	17	
9	1" FLAT HEAD SCREW FOR CARCASS	46	
10	9/16" FLAT HEAD SCREW	30	


STEP: 1

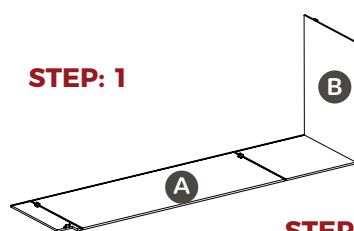



STEP: 2

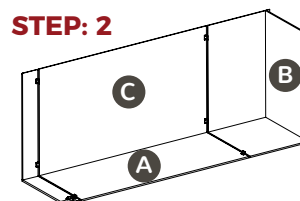


STEP: 3

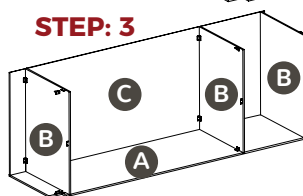


STEP: 4

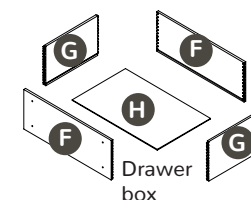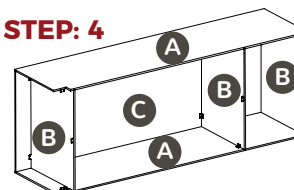


STEP: 5

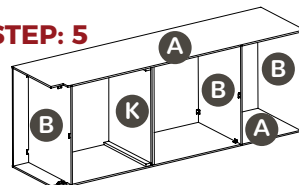



STEP: 7

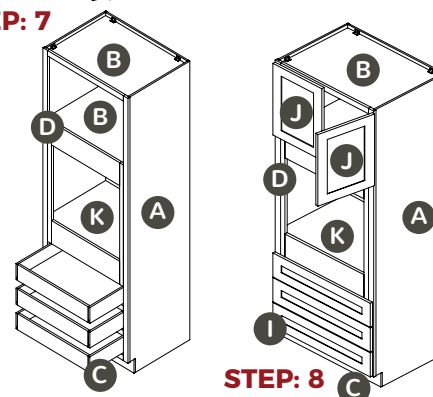

STEP: 6

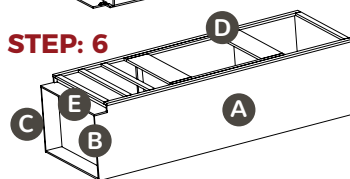

STEP: 8

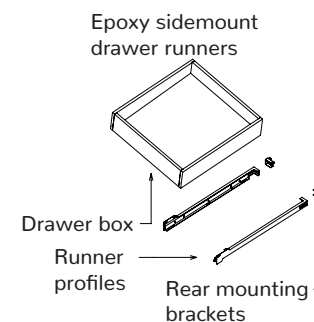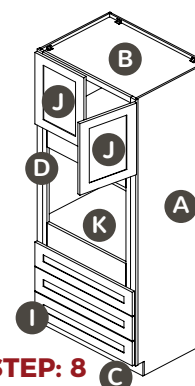

VKD36

ASSEMBLY INSTRUCTIONS

GETTING STARTED:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel


STEP 2: Joint side panel with back panel

STEP 3: Attach frame on and toekick board

STEP 4: Attach the plastic block on the top corner

STEP 5: Joint the drawer together, then install the drawer guide.



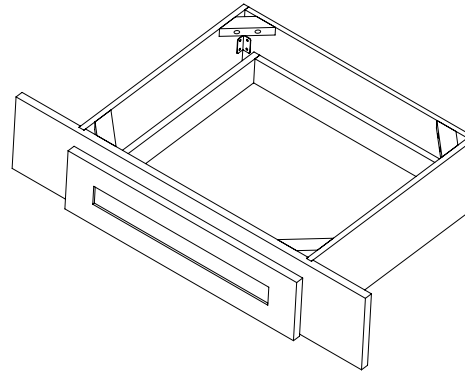





STEP 6: Fix drawer head on the drawer front and adjust the cover-space




PARTS LIST

NO.	DESCRIPTION	QTY
A	SIDE PANEL	2
B	BACK PANEL	1
C	FACE FRAME	1
D	DRAWER HEAD	1
E	DRAWER BOX BOTTOM	1
F	DRAWER BOX FRONT AND BACK	2
G	DRAWER BOX SIDE	2


HARDWARE LIST

NO.	DESCRIPTION	QTY	PICTURE
1	BUMPER	4	
2	1" ROUND HEAD SCREW	4	
3	EPOXY SLIDE	1	
4	9/16" ROUND HEAD SCREW	16	
5	CLEAT	4	
6	1" FLAT HEAD SCREW FOR CARCASS	8	
7	PLASTIC BLOCK	4	
8	9/16" FLAT HEAD SCREW	18	


STEP: 1

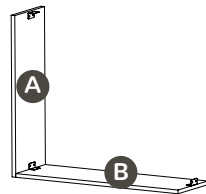


STEP: 2

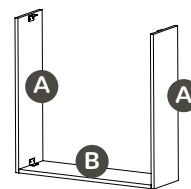


STEP: 3

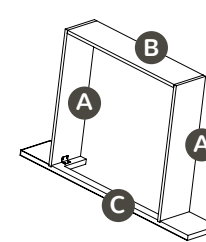



STEP: 4

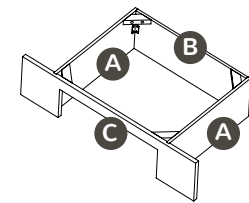


STEP: 5

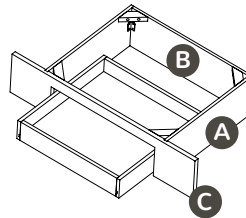

STEP: 6

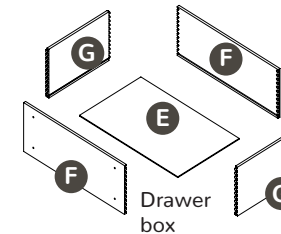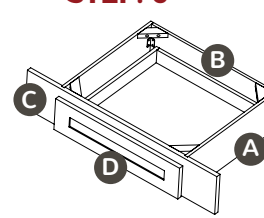

Epoxy sidemount drawer runners

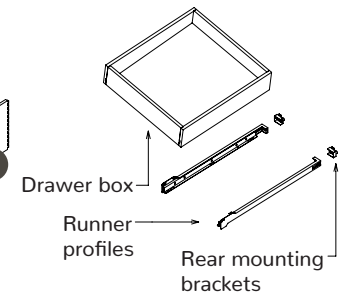

B24,B27,B30,B33,B36, ASSEMBLY INSTRUCTIONS

GETTING STARTED:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel


STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board

STEP 5: Joint the drawer together, then install the drawer guide.

STEP 6: Attach the plastic block on the top corner, and put on the adjustable shelf

STEP 7: Fix drawer head on the drawer front and fix door onto the frame and adjust the cover-space

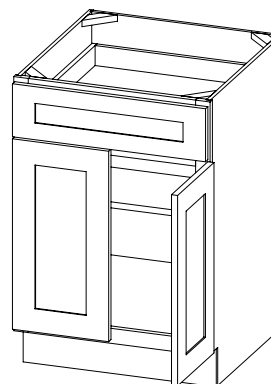


PARTS LIST

NO.	DESCRIPTION	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP & BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	2
G	DRAWER BOX SIDE	2
H	DRAWER BOX BOTTOM	1
I	ADJUSTABLE SHELF	1
J	DRAWER HEAD	1
K	CABINETS DOOR	2


HARDWARE LIST

NO.	DESCRIPTION	QTY	PICTURE
1	1/2" HINGE	4	
2	3/4" ROUND HEAD SCREW	4	
3	BUMPER	8	
4	1" ROUND HEAD SCREW	4	
5	EPOXY SLIDE	1	
6	SHELF CLIP	4	
7	9/16" ROUND HEAD SCREW	44	
8	CLEAT	11	
9	1" FLAT HEAD SCREW FOR CARCASS	11	
10	PLASTIC BLOCK	4	
11	9/16" FLAT HEAD SCREW	18	


STEP: 1

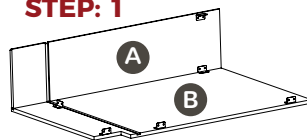


STEP: 2

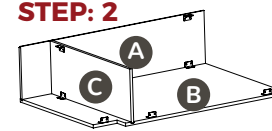


STEP: 3

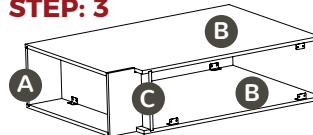


STEP: 4

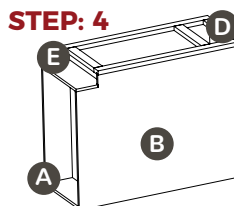


STEP: 5

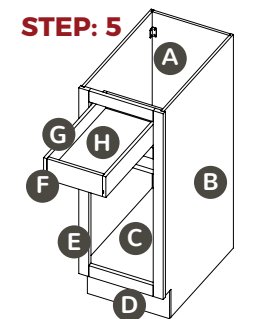



STEP: 6

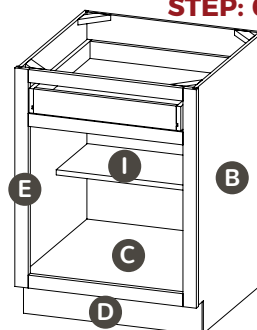

STEP: 7

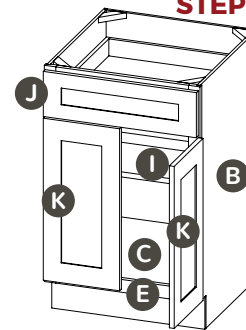

Epoxy sidemount drawer runners

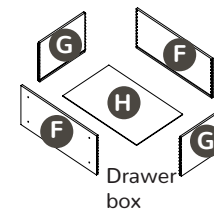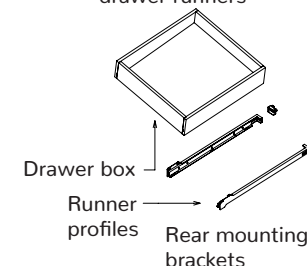

WRC2430,WRC3018

ASSEMBLY INSTRUCTIONS

GETTING STARTED:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint top panel with side panel


STEP 3: Joint bottom panel with side panel

STEP 4: Attach the wine rack on the both side


STEP 5: Attach front face frame on

PARTS LIST


NO.	DESCRIPTION	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP & BOTTOM PANEL	2
D	TOE KICK	2
E	FACE FRAME	1

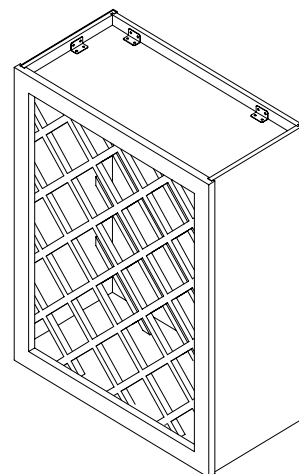


STEP: 1

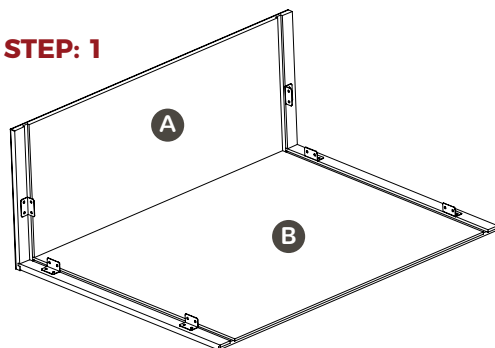


STEP: 2

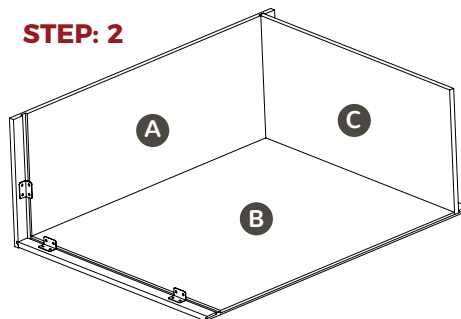


STEP: 3

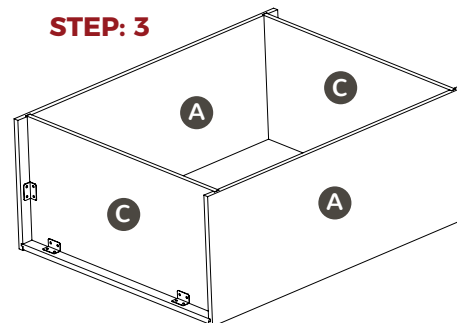




STEP: 4

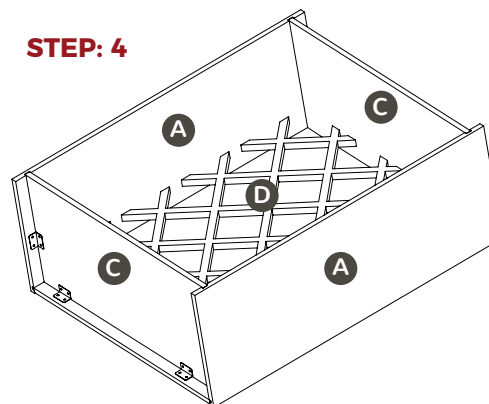

STEP: 5

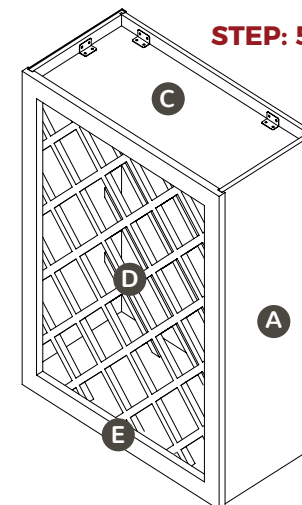

HARDWARE LIST

NO.	DESCRIPTION	QTY	PICTURE
1	9/16" ROUND HEAD SCREW	48	
2	CLEAT	12	
3	1" FLAT HEAD SCREW FOR CARCASS	12	

W2430,W2730,W3030,W3330,W3630 W2442,W2742,W3042,W3342,W3642 ASSEMBLY INSTRUCTIONS

GETTING STARTED:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel


STEP 2: Joint top panel with side panel

STEP 3: Joint bottom panel with side panel

STEP 4: Attach frame on

STEP 5: Put on the adjustable shelves

STEP 6: Fix door onto the frame and adjust
the cover-space

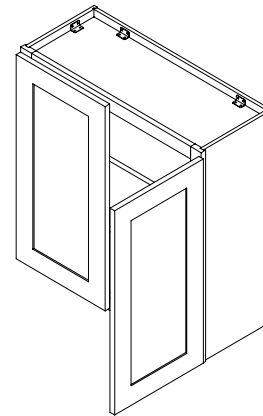


PARTS LIST

NO.	DESCRIPTION	QTY
A	BACK PANEL	2
B	SIDE PANEL	1
C	TOP & BOTTOM PANEL	2
D	FACE FRAME	1
E	ADJUSTABLE SHELF	2 OR 3
F	CABINETS DOOR	2


HARDWARE LIST

NO.	DESCRIPTION	QTY	PICTURE
1	1/2" HINGE	4	
2	3/4" ROUND HEAD SCREW	4	
3	BUMPER	4	
4	SHELF CLIP	8	
5	9/16" ROUND HEAD SCREW	56	
6	CLEAT	14	
7	1" FLAT HEAD SCREW FOR CARCASS	6	


STEP: 1

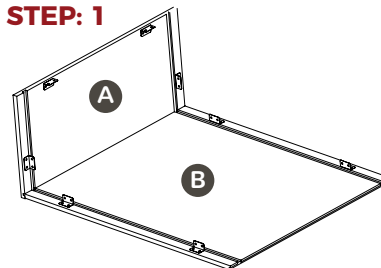


STEP: 2

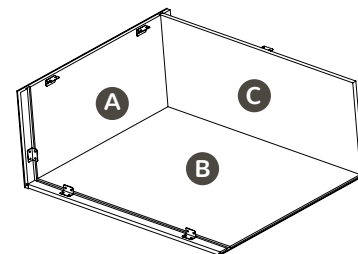


STEP: 3

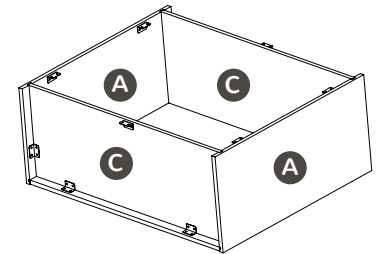


STEP: 4

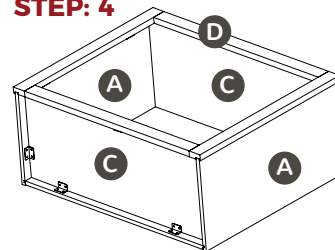

STEP: 5

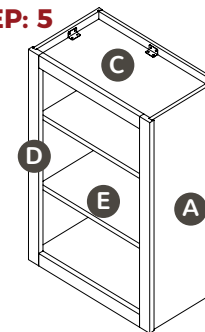

STEP: 6

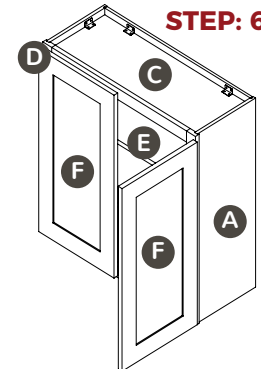

W3012,W3612,W3015,W3615,W361524, W3018,W3618,W361824 ASSEMBLY INSTRUCTIONS

GETTING STARTED:

prepare a protection layer, a screwdriver


STEP 1: Joint side panel with back panel

STEP 2: Joint side panel with back panel and attaching top panel for giving support

STEP 3: Joint back panel with side panel and back panel

STEP 4: Attach frame on


STEP 5: Fix door onto the frame and adjust the cover-space

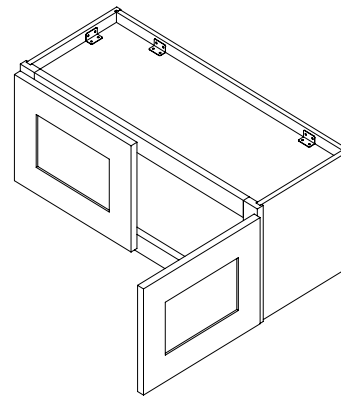


PARTS LIST

NO.	DESCRIPTION	QTY
A	SIDE PANEL	2
B	BACK PANEL	1
C	TOP & BOTTOM PANEL	2
D	FACE FRAME	1
E	CABINETS DOOR	2


STEP: 1

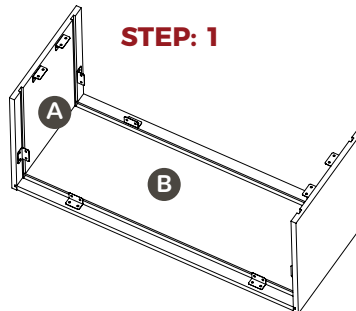


STEP: 2

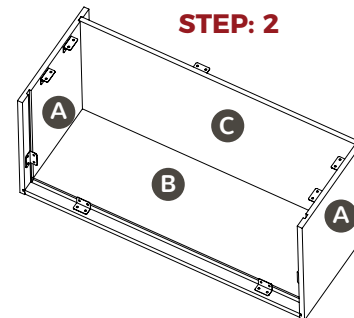


STEP: 3

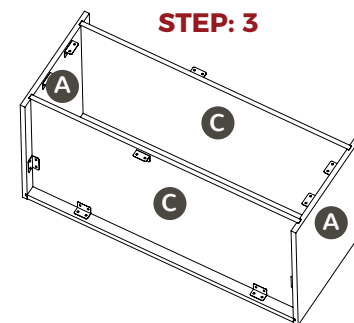

STEP: 4

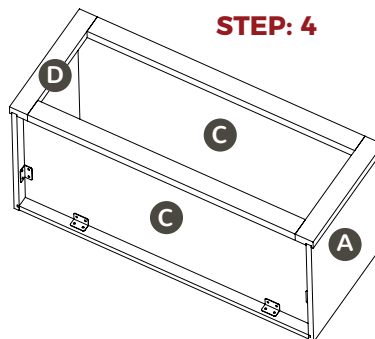

STEP: 5

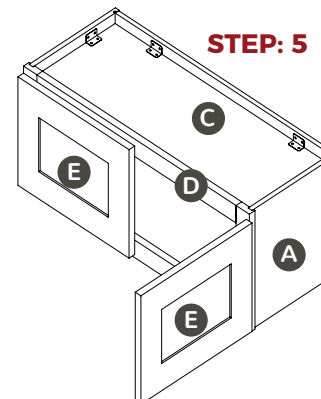

HARDWARE LIST

NO.	DESCRIPTION	QTY	PICTURE
1	1/2" HINGE	4	
2	3/4" ROUND HEAD SCREW	4	
3	BUMPER	4	
4	9/16" ROUND HEAD SCREW BUMPER	56	
5	CLEAT	14	
6	1" FLAT HEAD SCREW FOR CARCASS	8	

V3621DL&DR

ASSEMBLY INSTRUCTIONS

GETTING STARTED:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel


STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board


STEP 5: Joint the drawer together, then install the drawer guide.

STEP 6: Attach the plastic block on the top corner.


STEP 7: Fix drawer head on the drawer front and fix door onto the frame and adjust the cover-space

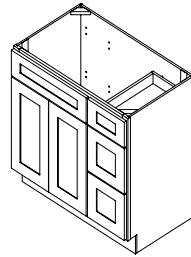

V3621DR

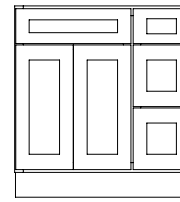

V3621DL

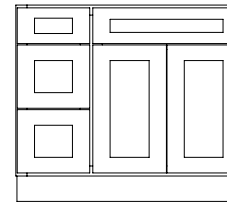


PARTS LIST

NO.	DESCRIPTION	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP & BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	6
G	DRAWER BOX SIDE	6
H	DRAWER BOX BOTTOM	3
I	CABINETS DOOR	2
J	DRAWER HEAD	4


HARDWARE LIST

NO.	DESCRIPTION	QTY	PICTURE
1	1/2" HINGE	4	
2	3/4" ROUND HEAD SCREW	4	
3	BUMPER	16	
4	1" ROUND HEAD SCREW	12	
5	Epoxy Slide	3	
6	9/16" ROUND HEAD SCREW	44	
7	CLEAT	11	
8	1" FLAT HEAD SCREW FOR CARCASS	28	
9	Plastic Block	4	
10	9/16" flat head screw	38	


STEP: 1

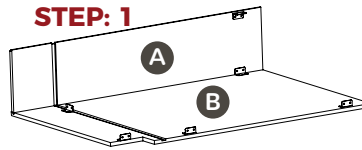


STEP: 2

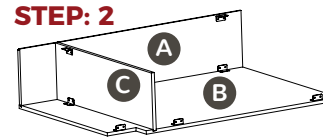


STEP: 3

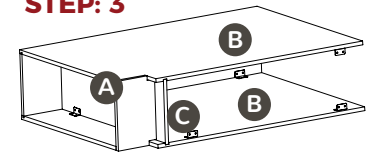


STEP: 4

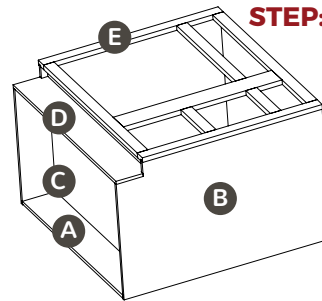


STEP: 5

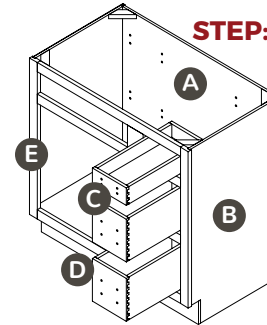



STEP: 6

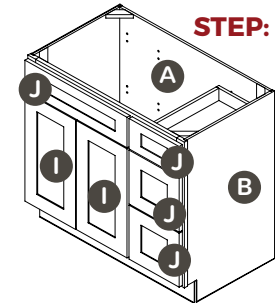

STEP: 7

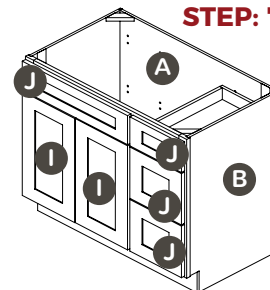

Epoxy sidemount
drawer runners

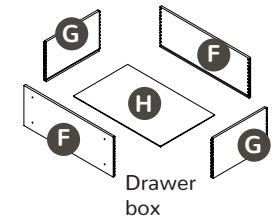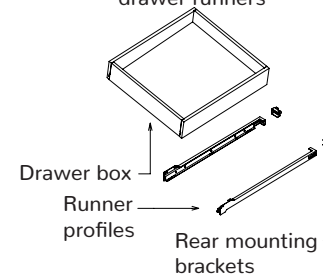

BBC36,BBC42

ASSEMBLY INSTRUCTIONS

GETTING STARTED:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel


STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board

STEP 5: Joint the drawer together, then install the drawer guide.

STEP 6: Attach the plastic block on the top corner, and put on the adjustable shelf

STEP 7: Fix drawer head on the drawer front and fix door onto the frame and adjust the cover-space

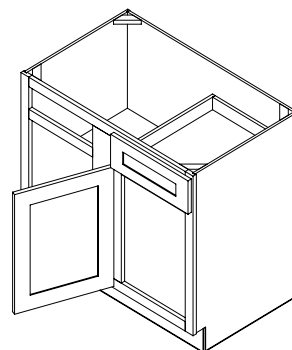


PARTS LIST

NO.	DESCRIPTION	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP & BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	2
G	DRAWER BOX SIDE	2
H	DRAWER BOX BOTTOM	1
I	ADJUSTABLE SHELF	1
J	CABINETS DOOR	1
K	DRAWER HEAD	1


HARDWARE LIST

NO.	DESCRIPTION	QTY	PICTURE
1	1/2" HINGE	2	
2	3/4" ROUND HEAD SCREW	2	
3	BUMPER	6	
4	1" ROUND HEAD SCREW	4	
5	Epoxy Slide	1	
6	SHELF CLIP	4	
7	9/16" ROUND HEAD SCREW	44	
8	CLEAT	11	
9	1" FLAT HEAD SCREW FOR CARCASS	13	
10	Plastic Block 3/4" ROUND HEAD SCREW	4	
11	9/16" flat head screw	18	


STEP: 1

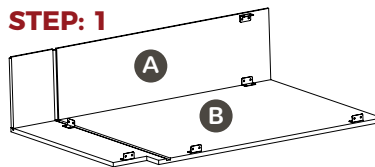


STEP: 2

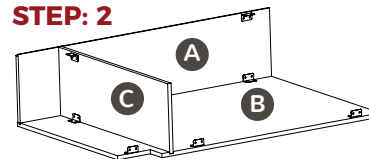


STEP: 3

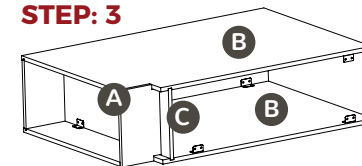


STEP: 4

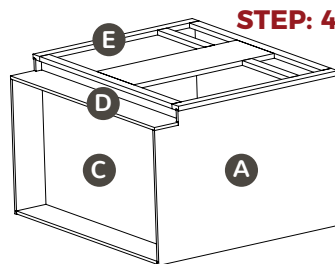


STEP: 5

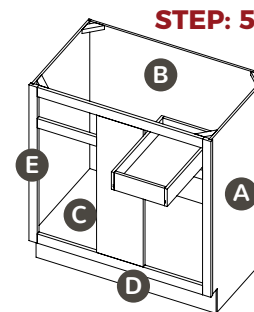



STEP: 6

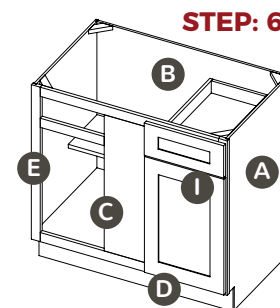

STEP: 7

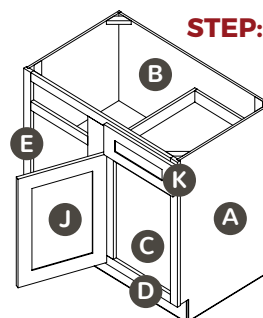

Epoxy sidemount
drawer runners

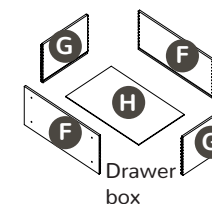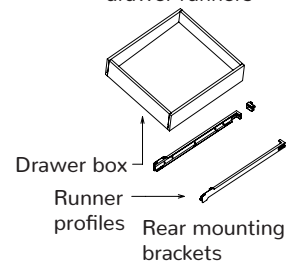

BEC24

ASSEMBLY INSTRUCTIONS

GETTING STARTED:

prepare a protection layer, a screwdriver

STEP 1: Joint two side panel together

STEP 2: Attach top panel

STEP 3: Attach bottom panel

STEP 4: Attach toekick on


STEP 5: Attach frame on

STEP 6: Put on the adjustable shelves

STEP 7: Hinge the door onto the face frame and adjust the cover-space


PARTS LIST

NO.	DESCRIPTION	QTY
A	SIDE PANEL	1
B	SIDE PANEL	1
C	TOP & BOTTOM PANEL	2
D	TOE KICK	2
E	FACE FRAME	2
F	ADJUSTABLE SHELF	2
G	CABINETS DOOR	2

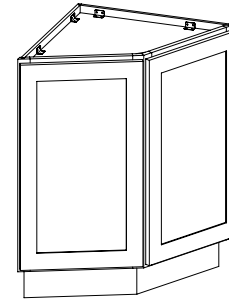


HARDWARE LIST


NO.	DESCRIPTION	QTY	PICTURE
1	Wood Block	2	
2	135 DEGREE ANGLE	3	
3	1/2" HINGE	4	
4	3/4" ROUND HEAD SCREW	4	
5	BUMPER	4	
6	SHELF CLIP	12	
7	9/16" ROUND HEAD SCREW	78	
8	CLEAT	18	
9	1" FLAT HEAD SCREW FOR CARCASS	5	

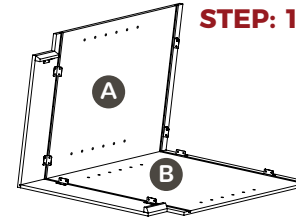


STEP: 1

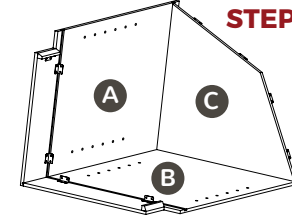


STEP: 2

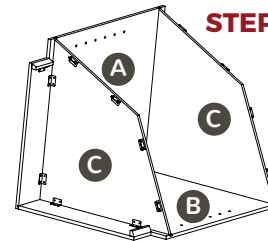


STEP: 3

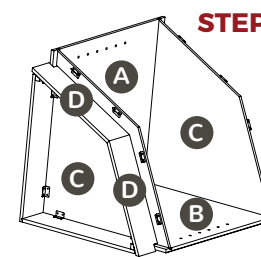


STEP: 4

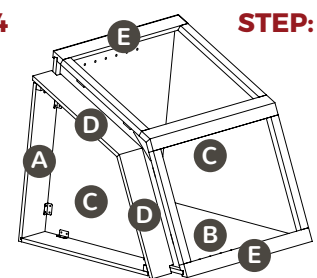

STEP: 5

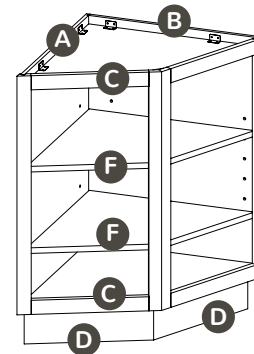

STEP: 6

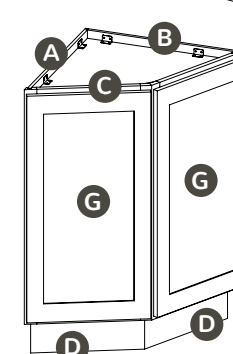

STEP: 7

3DB12,3DB15,3DB18,3DB24,3DB30,3DB36 3VDB12,3VDB18 ASSEMBLY INSTRUCTIONS

GETTING STARTED:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel

STEP 3: Joint side panel with bottom & back panel


STEP 4: Attach frame on and toekick board

STEP 5: Joint the drawer together, then install the drawer guide.


STEP 6: Attach the plastic block on the top corner, and put on the adjustable shelf

STEP 7: Fix drawer head on the drawer front and adjust the cover-space


PARTS LIST		
NO.	DESCRIPTION	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP & BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	6
G	DRAWER BOX SIDE	6
H	DRAWER BOX BOTTOM	3
I	DRAWER HEAD	3

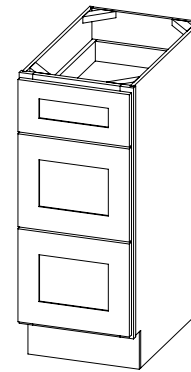


STEP: 1

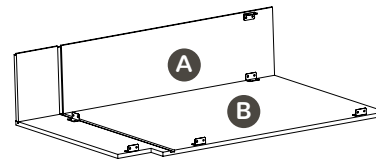


STEP: 2

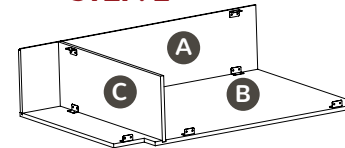


STEP: 3

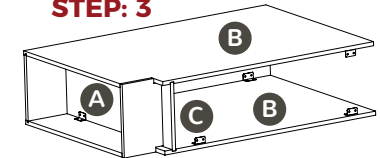


STEP: 4

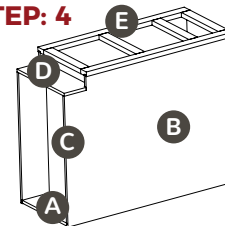


STEP: 5

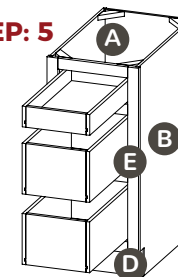



STEP: 6

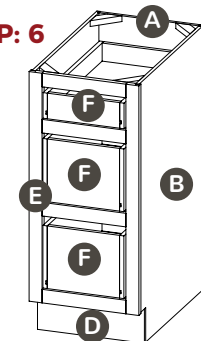



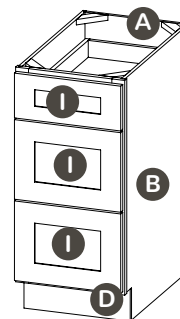

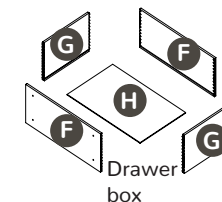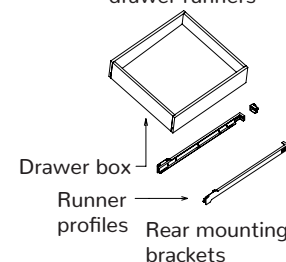



STEP: 7



Epoxy sidemount
drawer runners



HARDWARE LIST			
NO.	DESCRIPTION	QTY	PICTURE
1	BUMPER	12	
2	1" ROUND HEAD SCREW	12	
3	EPOXY SLIDE	3	
4	9/16" ROUND HEAD SCREW	40	
5	CLEAT	10	
6	1" FLAT HEAD SCREW FOR CARCASS	26	
7	PLASTIC BLOCK	4	
8	9/16" FLAT HEAD SCREW	38	

BT9

ASSEMBLY INSTRUCTIONS

GETTING STARTED:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel


STEP 2: Joint bottom panel with side panel

STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board

STEP 5: Attach the plastic block on the top corner



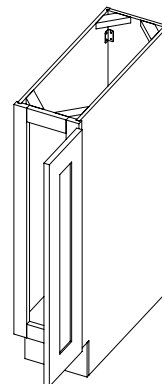





STEP 6: Fix door onto the frame and adjust the cover-space




PARTS LIST

NO.	DESCRIPTION	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP & BOTTOM PANEL	1
D	FACE FRAME	1
E	TOE KICK	1
F	CABINETS DOOR	1


HARDWARE LIST

NO.	DESCRIPTION	QTY	PICTURE
1	1/2" HINGE	2	
2	3/4" ROUND HEAD SCREW	2	
3	BUMPER	2	
4	9/16" ROUND HEAD SCREW	40	
5	CLEAT	10	
6	1" FLAT HEAD SCREW FOR CARCASS	2	
7	PLASTIC BLOCK	4	
8	9/16" FLAT HEAD SCREW	8	


STEP: 1

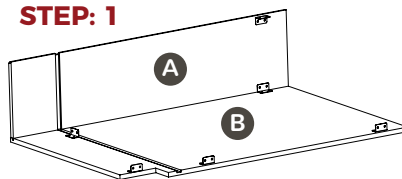


STEP: 2

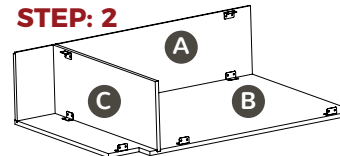


STEP: 3

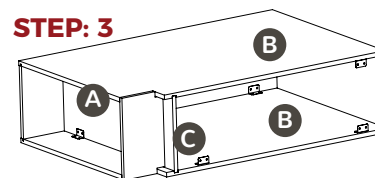


STEP: 4

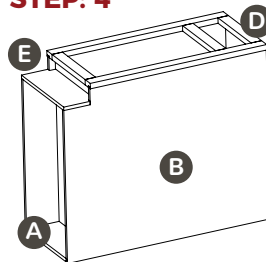

STEP: 5

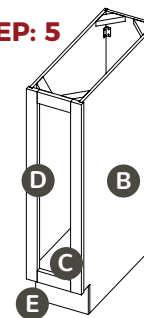

STEP: 6

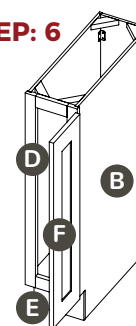

MS3018

ASSEMBLY INSTRUCTIONS

GETTING STARTED:

prepare a protection layer, a screwdriver


STEP 1: Joint top panel with back panel

STEP 2: Joint side panel with back panel

STEP 3: Joint bottom panel and middle panel with side panel


STEP 4: Attach frame on

STEP 5: Fix door onto the frame and adjust the cover-space

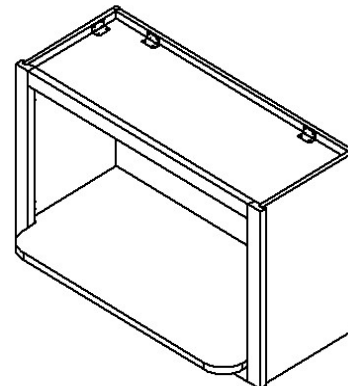


PARTS LIST


NO.	DESCRIPTION	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	BOTTOM PANEL	1
D	TOP PANEL	1
E	FACE FRAME	1

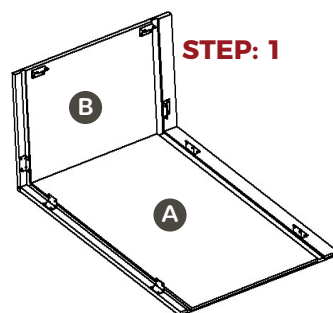


STEP: 1

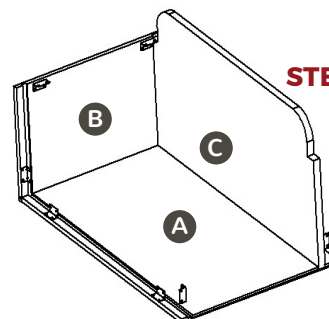


STEP: 2

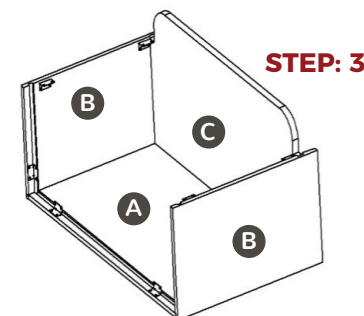

STEP: 3

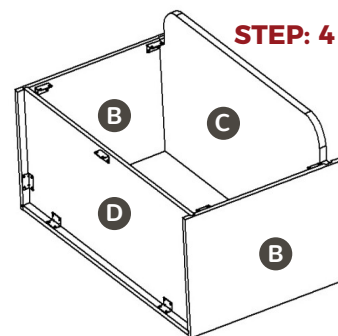

STEP: 4

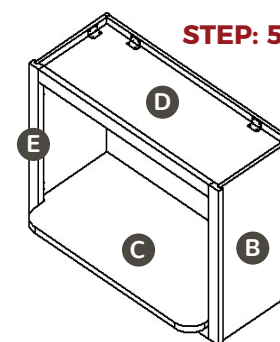

STEP: 5

HARDWARE LIST

NO.	DESCRIPTION	QTY	PICTURE
1	9/16" ROUND HEAD SCREW	56	
2	CLEAT	14	
3	BUMPER	4	

W3024,W3624,W362424

ASSEMBLY INSTRUCTIONS

GETTING STARTED:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel


STEP 2: Joint top panel with side panel

STEP 3: Joint bottom panel with side panel

STEP 4: Attach frame on





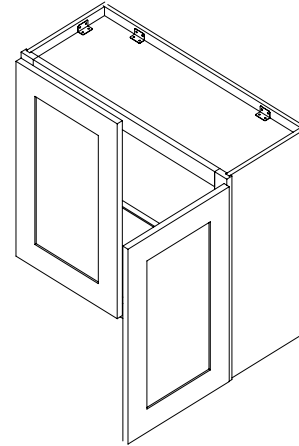


STEP 5: Put on the adjustable shelves


STEP 6: Fix door onto the frame and adjust the cover-space




PARTS LIST

NO.	DESCRIPTION	QTY
A	BACK PANEL	2
B	SIDE PANEL	1
C	TOP & BOTTOM PANEL	2
D	FACE FRAME	1
E	ADJUSTABLE SHELF	1
F	CABINETS DOOR	2


HARDWARE LIST			
NO.	DESCRIPTION	QTY	PICTURE
1	1/2" HINGE	4	
2	3/4" ROUND HEAD SCREW	4	
3	BUMPER	4	
4	SHELF CLIP	4	
5	9/16" ROUND HEAD SCREW	56	
6	CLEAT	14	
7	1" FLAT HEAD SCREW FOR CARCASS	8	

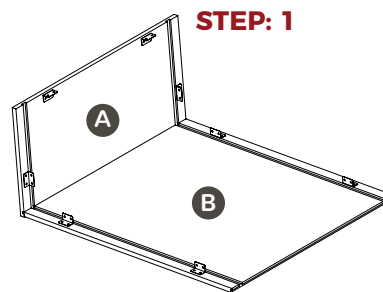


STEP: 1

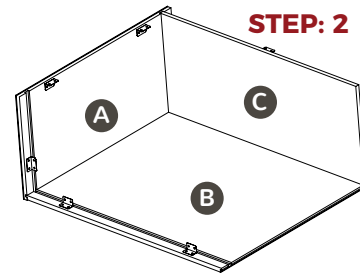


STEP: 2

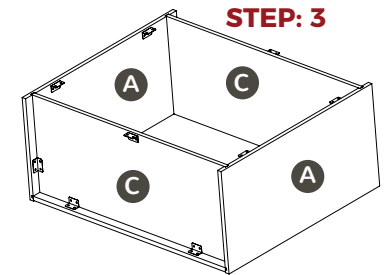


STEP: 3

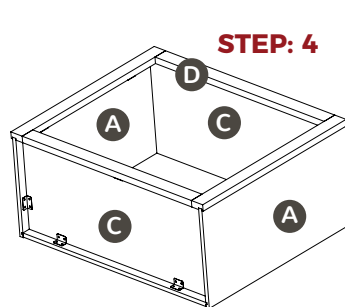

STEP: 4

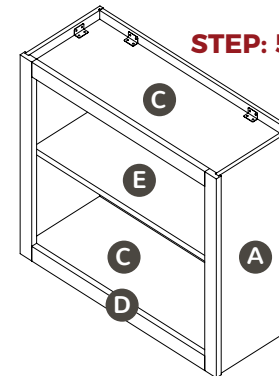

STEP: 5

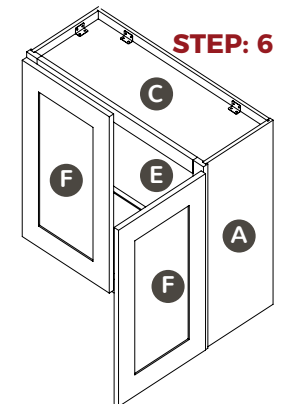

STEP: 6

B12,B15,B18,B21

ASSEMBLY INSTRUCTIONS

GETTING STARTED:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel


STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board

STEP 5: Joint the drawer together, then install the drawer guide.

STEP 6: Attach the wood block on the top corner.and put on the adjustable shelf

STEP 7: Fix drawer head on the drawer front and fix door onto the frame and adjust the cover-space







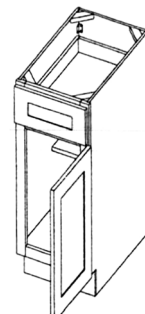


PARTS LIST


NO.	DESCRIPTION	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP & BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	2
G	DRAWER BOX SIDE	2
H	DRAWER BOX BOTTOM	1
I	ADJUSTABLE SHELF	1
J	DRAWER HEAD	1
K	CABINETS DOOR	1

HARDWARE LIST

NO.	DESCRIPTION	QTY	PICTURE
1	HINGE PLATE	1	
2	1 1/2" SOFTCLOSE HINGE	2	
3	3/4" ROUND HEAD SCREW	2	
4	BUMPER	6	
5	DAMPER	1	
6	1" ROUND HEAD SCREW	4	
7	SELF-CLOSE SLIDER	1	
8	SHELF CLIP	4	
9	9/16" ROUND HEAD SCREW	40	
10	CLEAT	10	
11	FLAT HEAD SCREW FOR CARCASS	2	
12	WOOD BLOCK	4	
13	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	

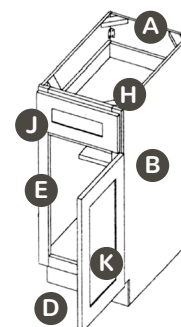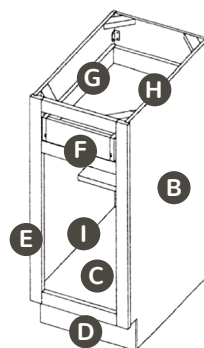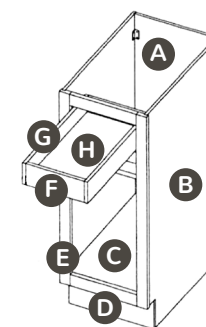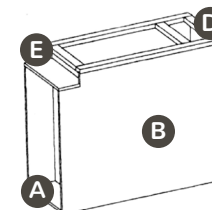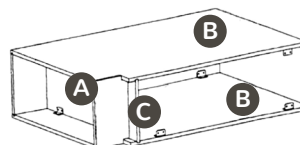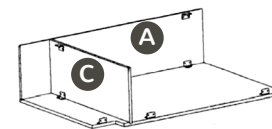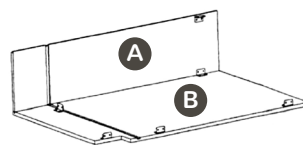

Epoxy sidemount
drawer runners

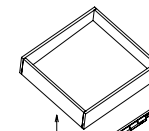

Drawer box
Runner
profiles
Rear mounting
brackets

